

CAT 5 Connection -

Where the home or office has already been hard wired with extension sockets and a patch panel is installed.


Supplied with your PBX / KS system you will find the following:

1 x Mains Power lead

3 x Black Line Connector Leads (this is for the 308 versions only – 206 versions will have 2 leads and the 416 versions will have 4)

1 x White 10cm Extension Adaptor Lead

1 x Programming Guide on Disc

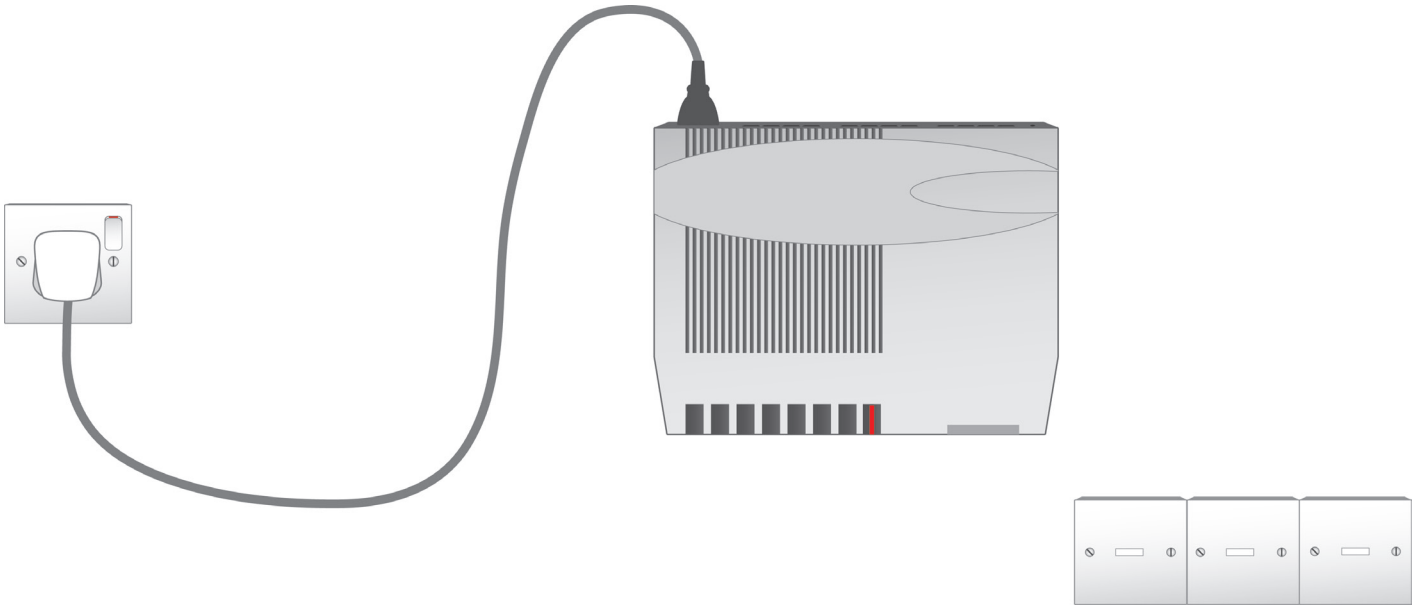


Step One:

Locate your PBX system near to a mains power supply and the incoming BT Line sockets.

Plug in the mains power lead and switch on.

Red Power light will be displayed.

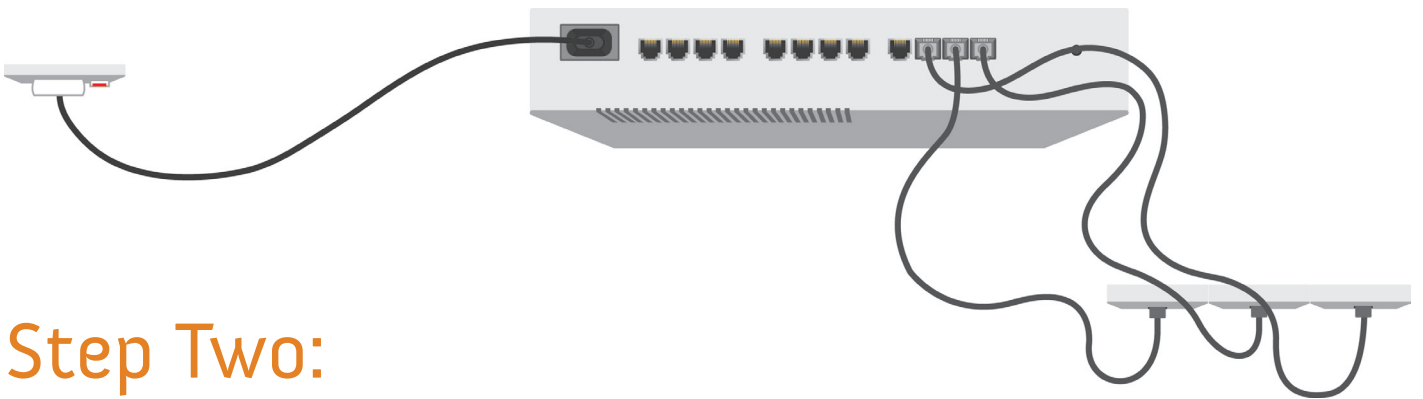


Step Two:

Using the Black Line connector leads provided connect the PBX to your incoming BT/Cable line sockets.


If you are not using the full line capacity please refer to page 6 of the programming guide.

Any line capacity on the PBX not used can be utilised at a later date.

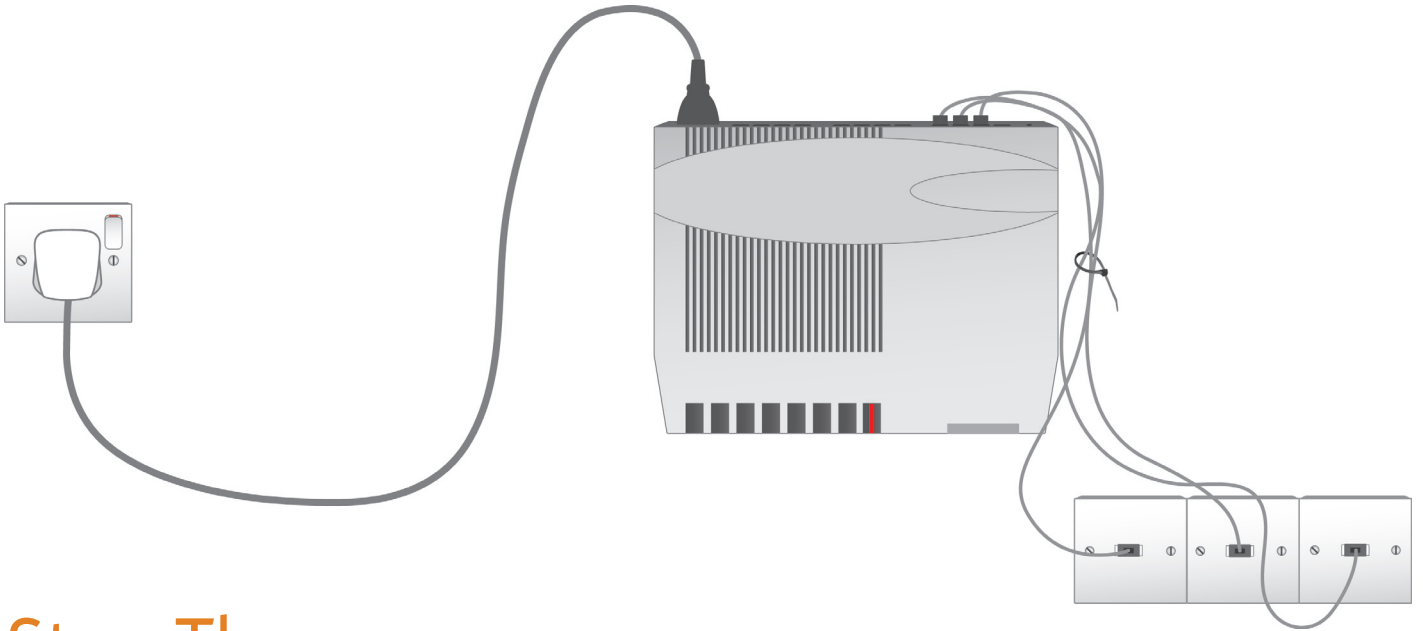

Step Three:


You can use the cable ties from the connector leads to tidy the cabling between the sockets and the PBX.

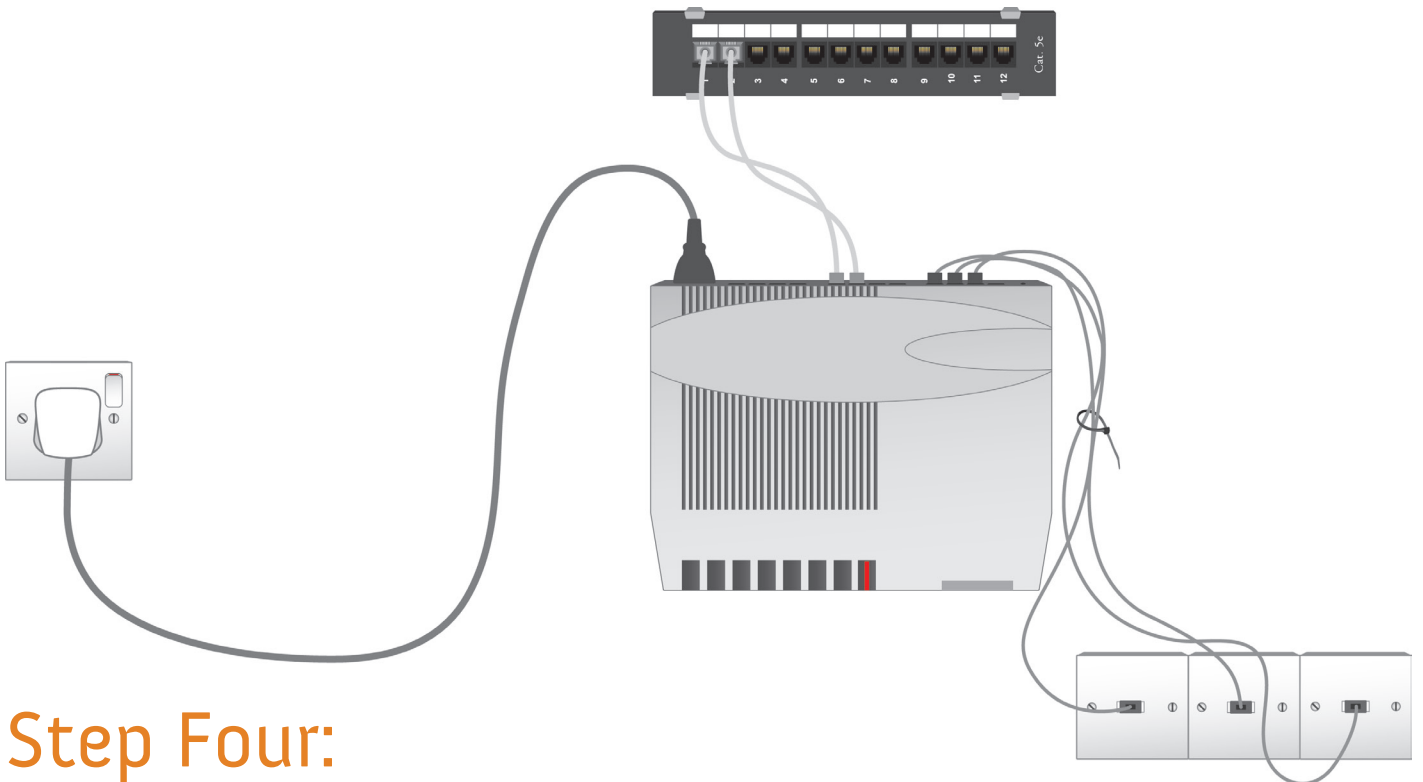

Step Four:

Using Patch Panel Leads (Not provided) connect the PBX extension sockets to the Patch Panel (CAT 5)

Please note: The first extension is required to program the system so it is advisable to connect this one first.

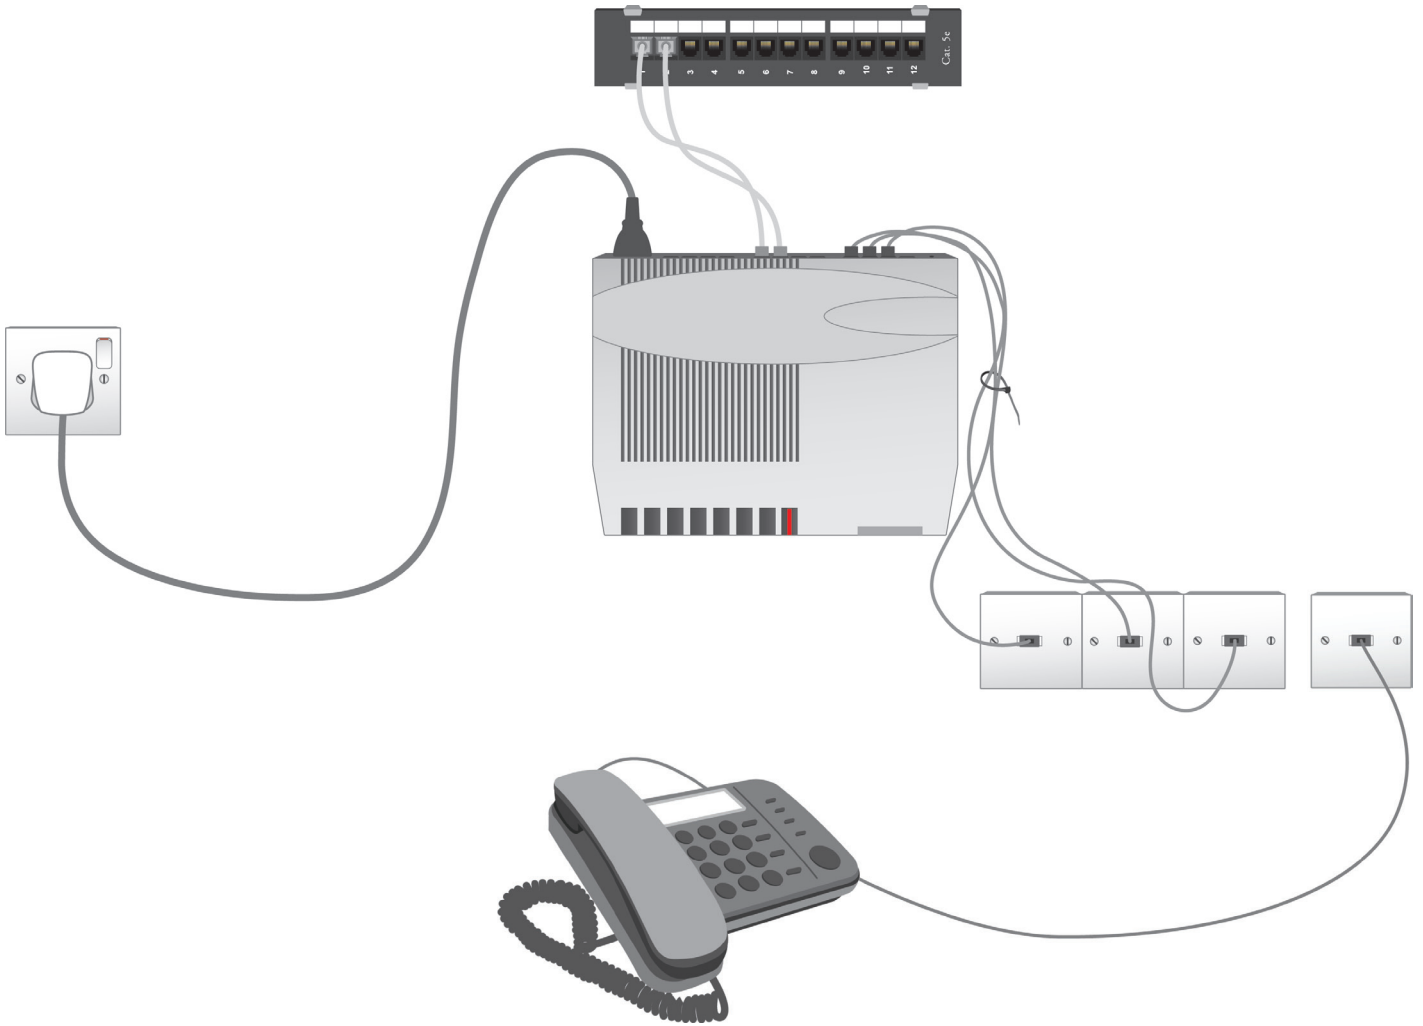

Step Five:

Your phones can now be connected via the existing sockets around the building.

Patch Panel leads can be purchased direct from your dealer.